



SPRINT AIRAVE™




QUICK START GUIDE


1

# Package Contents


Remove and identify these components:

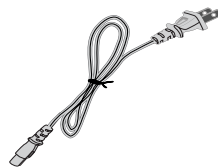


Power Cord

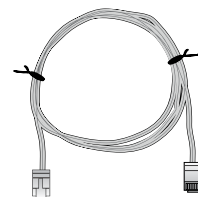

Ethernet Cable

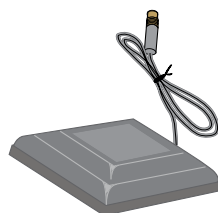


GPS Antenna

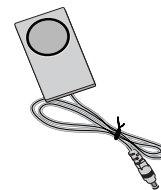

Power Supply



AIRAVE Base Station

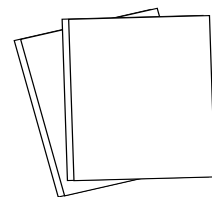

Printed Materials

2

## Before You Begin

### Activating your AIRAVE Account

Your base station should already be activated. If it is not activated, please call Sprint Customer Service at **1-888-211-4727**.

Should you need to activate your base station, you will be asked to provide the following information:

- **Primary Wireless Phone Number** (Account number)
- **Account Password**
- **MEID** of the specific base station found on the sticker affixed to the device.


**Note:** A free Ethernet port is required to connect the AIRAVE. If your broadband modem does not have a free port, you will need an additional device, such as a router or switch, to connect your base station.

For additional details about AIRAVE, including troubleshooting tips, please see the User Guide packaged with your base station.


3


## Your AIRAVE

### FRONT VIEW

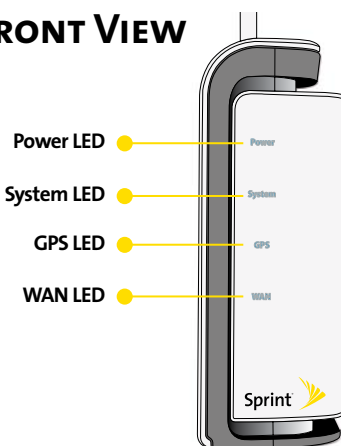


### REAR VIEW

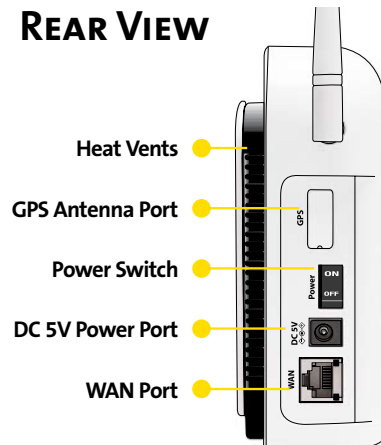 


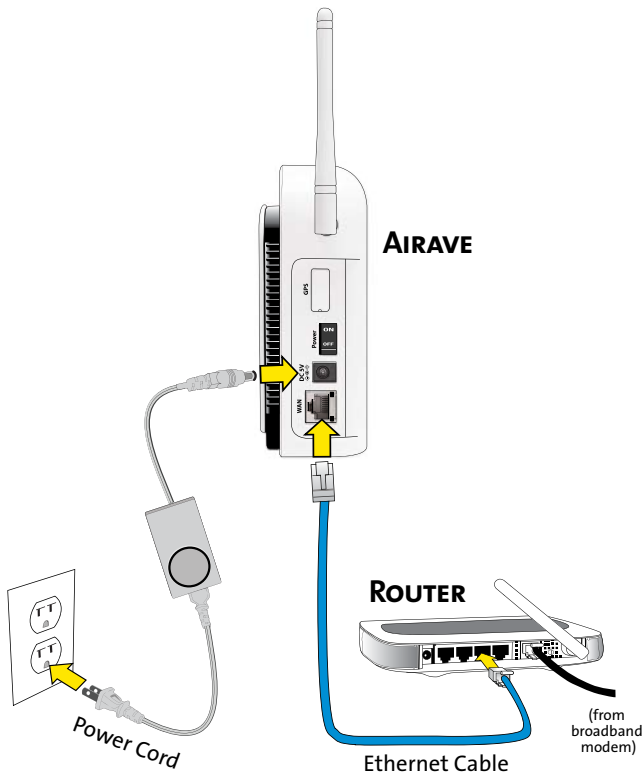 

- 4** Plug the power supply connector into the DC 5V power port located at the rear of the base station.

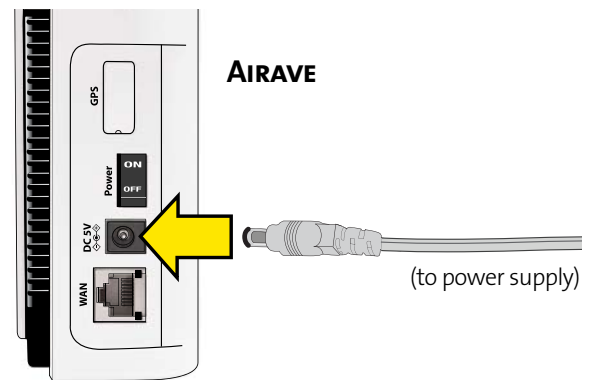


- 5** Insert one end of the power cord into the power supply.

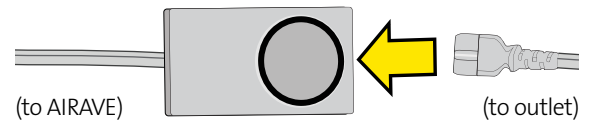


## Set-up Overview

- 1** Place the base station in an elevated location, such as the top of a bookshelf or tall cabinet. For best results, place the base station near a window.


- 2** Connect one end of the included Ethernet cable to a free port on your router (or similar device).

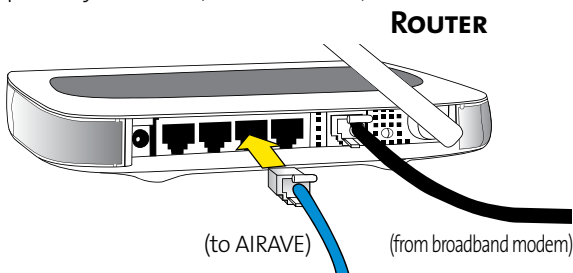

- 3** Connect the other end to the WAN port located at the rear of the base station.

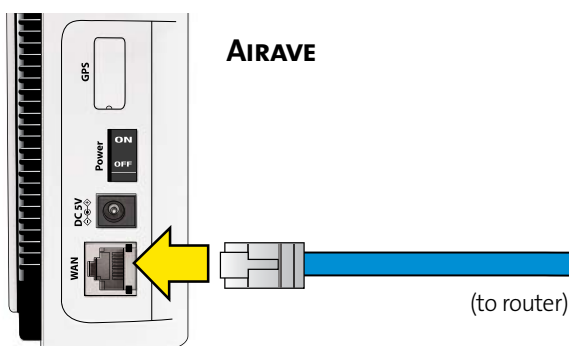

- 6** Plug the other end into an available power outlet.

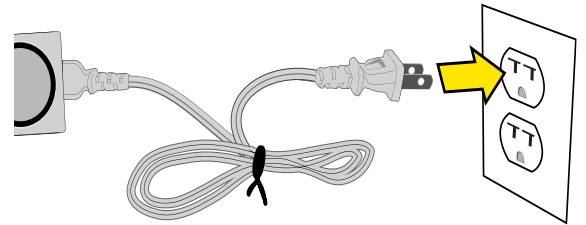

**WARNING!** Insert the plug from the power cord into the power outlet last. Failure to do so could cause an electrical short or power surge to the base station.

- 7** Move the Power switch to the On position. Confirm that the front LEDs are all lit and blue. (See "Front View" in section 3.)

To turn the unit off, move the Power switch to the Off position.

**Note:** The first time the base station is used, it may take as long as one hour for the initial GPS acquisition. (If the GPS LED is still red after one hour, you will need to install the optional GPS antenna. See "Section 3A: Antenna Installation" in your user guide.)

**Tip:** To verify that your base station is working properly, dial \*99 from your wireless phone. You should hear an audio message that you are now within AIRAVE coverage. Also, when you make or receive a call within AIRAVE coverage, you will hear a short tone before your call connects indicating that the call is being routed through the base station.